


Press-in threaded inserts without head, with straight knurled head, for thermoplastics

BN 1936

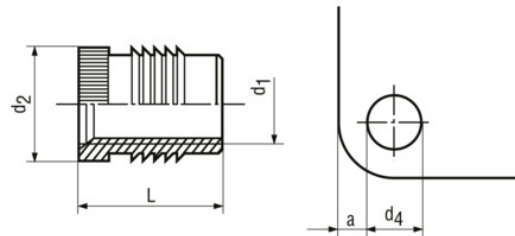

Headform

Straight knurled

Material

Brass


Base coat

plain

Assembly notice

1. Place shoulder of insert into pre-drilled hole.
2. Press in the insert by using a setting punch with pilot.
3. Fasten the workpiece with screw.

Illustration assembly

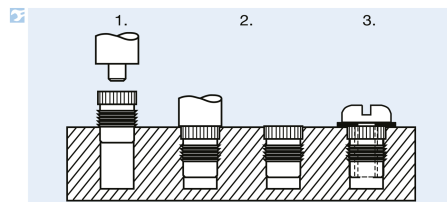

Article no.	Thread size (d1)	d2	L	d4	a thermoplastics	a thermosettings
1430890	M2,5	4,5	4,8	4	2	3,2
1430904	M3	4,5	4,8	4	2	3,2
1430920	M4	6,1	7,9	5,6	2,8	4
1430939	M5	7	9,5	6,4	3,3	4,8
1430947	M6	8,6	12,7	8	4	6
1430955	M8	10,2	12,7	9,6	4,8	7